

Open Device Wi-Fi Settings and Connect to CSDrone Network

Flashing red light on drone will become solid when connected


4



Arm the Drone Using Joysticks

Then, select the "phone tilt control" using this switch

6

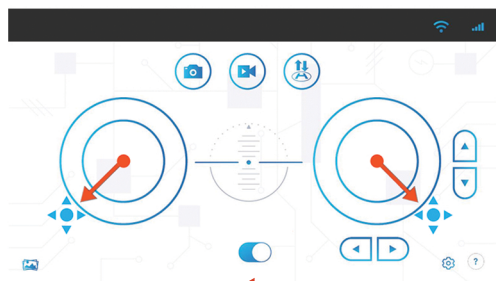

7



Tap Button to Take Off and Land

Tilt Device to Control Flight Path

8

Disarm the Drone Using Joysticks

Once disarmed, the propellers will stop spinning completely

9

